


FLOAT MARK TEST 2025 NORDIC FOLKBOAT

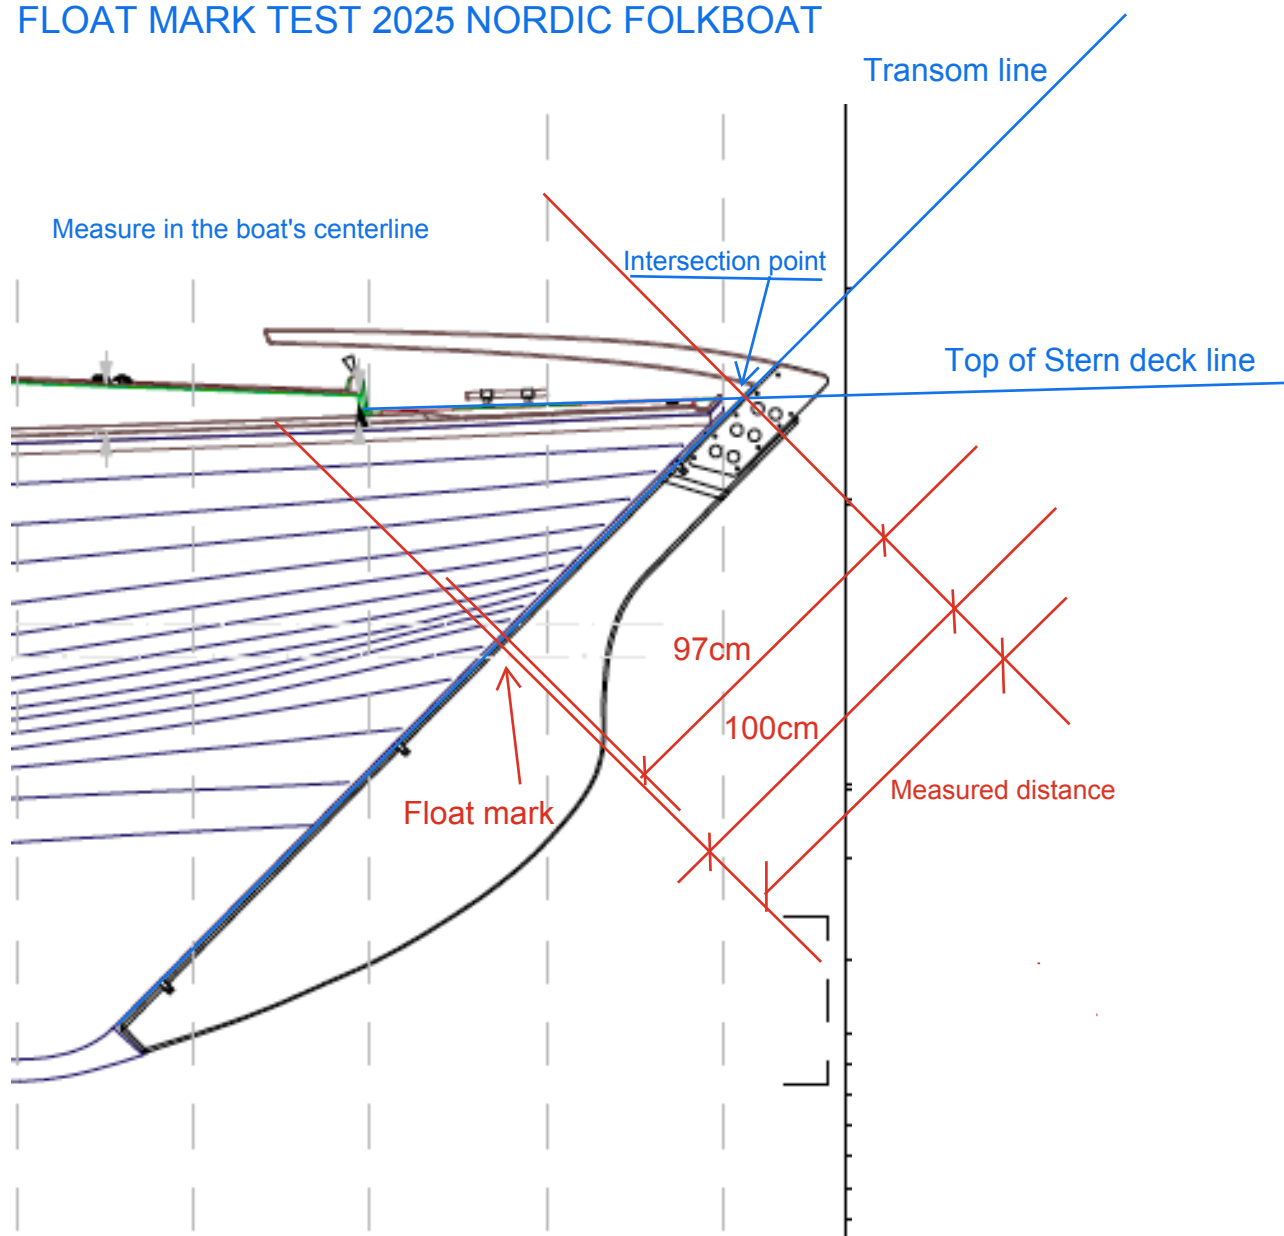

The position of the float mark shall be measured from the intersection of the top of the stern deck and the transom, in the boat's centerline, along the transom.

The boat's condition shall be the same as when weighing a boat according to CR 10.

Before launching, place two float marks horizontally in the centerline on the transom, at the distance 97 cm and 100 cm from the intersection point. A probable range which the boat's float position should be within.

If necessary for clarity, expand the float marks horizontally to rudder or hull.

Moore the boat with light, loose mooring lines.

Based on the two float marks, measure the boat's float position as accurately as possible.

Please report the result, measured distance, and boat number to the NFIA Technical Committee.